
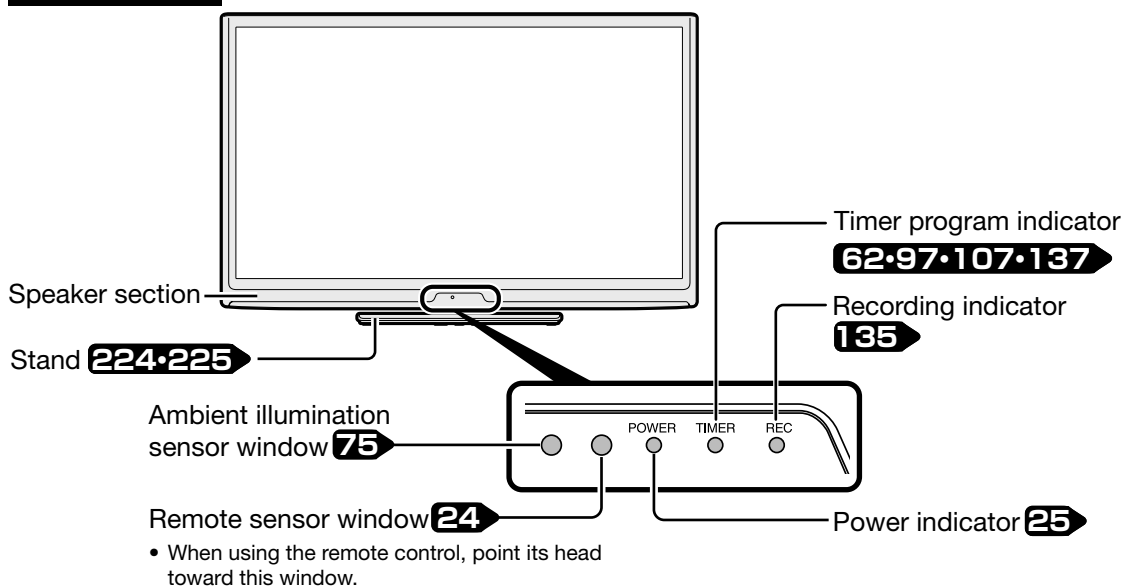


# English Guide

## Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


### Front view



### Adjusting the LCD panel angle


- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

### Left side view

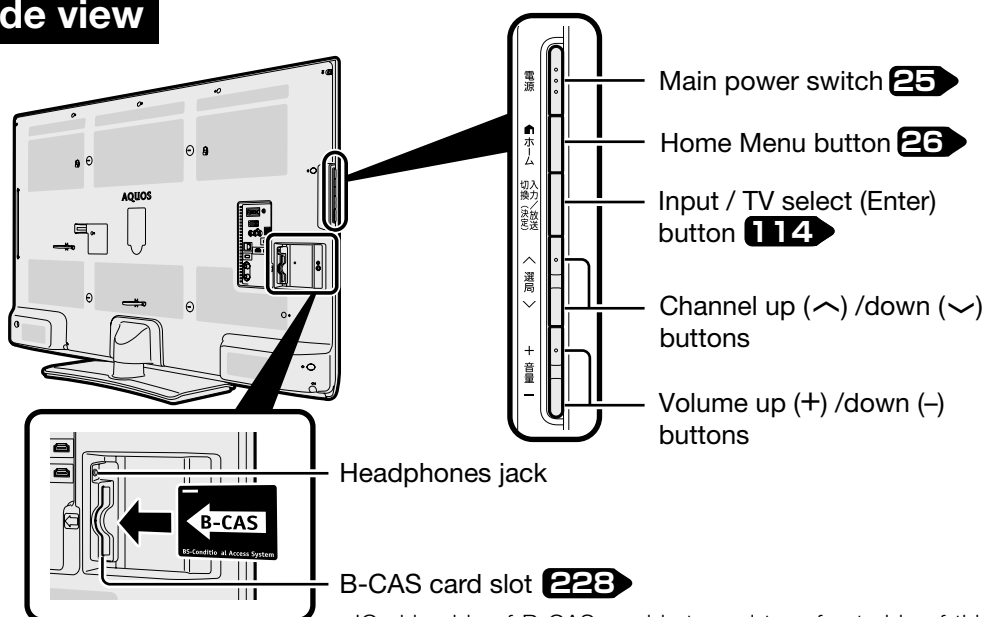

## Back view

The illustrations below are those of LC-52V5.  
LC-46V5/LC-40V5 has the same layout of jacks and terminals as LC-52V5.

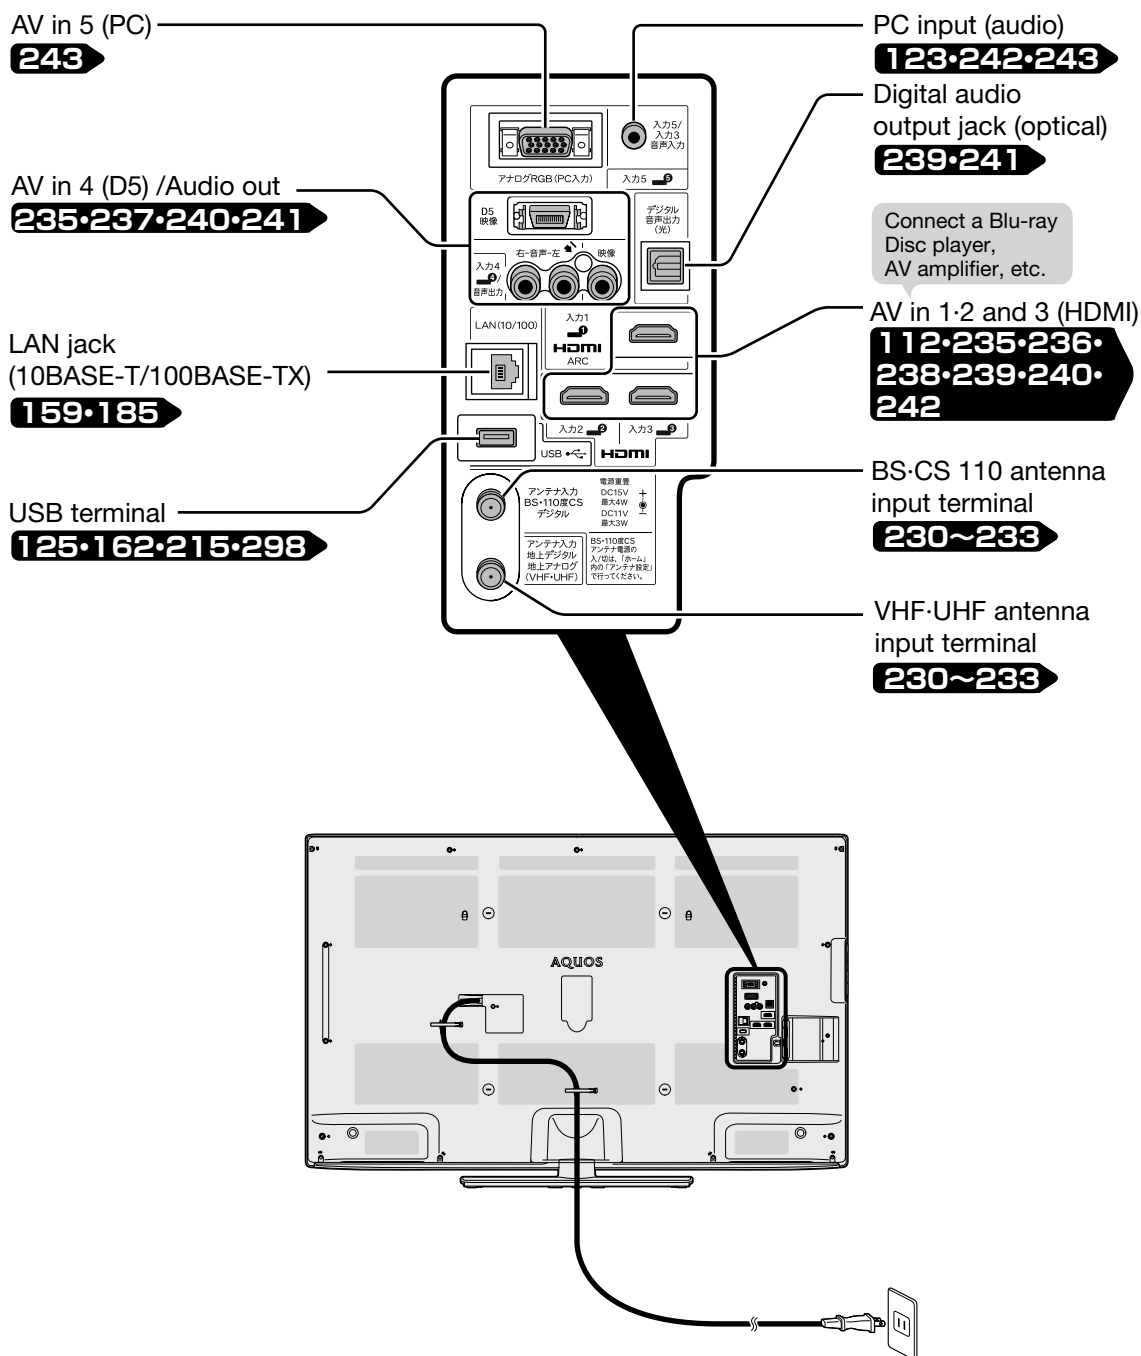

# Remote Control Unit

## Active/Standby **25**

Press to engage the TV set in the active or standby mode.

## 字幕 **Caption** **58 • 191**

Press to display, select, or turn off captions when watching a digital program with captions.

## 3桁入力 **Digital channel number input** **33**

Use to select a digital channel by entering the 3-digit channel number.

## (CATV) **CATV** **33**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10).

## 消音 **Mute** **31 • 190**

Press to mute audio.

## + 音量 - **Volume up (+)/down (-)** **31 • 190**

Press to adjust the volume.

データ連動

## **d** **Linked data broadcast** **34 • 191**

Press to call the data broadcast linked with the current digital TV program.

AVボジション

## **AV mode select** **71**

Press to select the picture/sound setting that best matches the current program.

オフタイマー

## **Sleep timer** **88**

Press to select the remaining time period after which the TV set automatically enters the standby mode.

ファミリンク

## **Familink** **102 • 112 • 134 • 145 • 148**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

## 番組表 **EPG** **44 • 106 • 137**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## ホーム **Display the "Home" Menu** **26 • 27**

Press to start some useful operations of the TV.

番組情報

## **Program info** **37**

Press to display detailed information on the current digital program.

## Finish

Press to finish menu operation, etc.

## **SAVE mode** **91**

Press to change to the SAVE mode.

## **Freeze** **35**

Press to freeze the picture.

## **Familink** **102~105 • 107~110 • 135 • 136 • 146~149**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

常連番組

## **Recommended programs select** **52~53**

Press to select a program which the TV set recommends.

画面表示

## **Display** **36 • 37 • 303**

Press to display or turn off the channel call, etc.

インターネット

## **Internet** **175 • 190 • 194 • 196 • 198**

Press to connect to the internet.

VOD操作

## **VOD** **195 • 199 • 211**

Press to display the VOD control panel.

## **Channel select** **31 • 190**

- Press to select a channel.
- Use to input a number for various settings.

## 地上D **Terrestrial digital select** **31**

## BS **BS select** **31**

## CS **CS select** **31**

## 地上A **Terrestrial analog select** **31**

When selecting the CS digital channel for the first time. **251**

## ↑ 選局 ↓ **Channel up (Δ)/down (V)** **31 • 41 • 191**

Press to select channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped. **269**

入力切替

## **Input select** **114**

Press to select the input.

## **Display the Tool Menu** **26 • 27 • 30**

## **Cursor (up, down, left, right)** **26 • 27**

Use to select a menu item, column, etc.

## 決定 **Enter/Confirm** **26 • 27**

Press to confirm a selected setting or menu item.

## **Return** **26**

Press to go back to the previous screen.

青 赤 緑 黄

## **Color** **34 • 45~49 • 92**

Use to operate EPGs and data program screens.

画面サイズ

## **Screen mode** **67 • 121**

Press to select the desired screen mode.

映像切替

## **Picture select** **58**

Press to select the desired picture when watching a digital multi-picture program.

音声切替

## **Audio select** **58 • 191**

Press to select the audio.

テレビデータ

## **Media select** **31 • 34 • 191**

Press to select the media (TV or data).

2画面

## **Split screen** **54~55**

Press to switch between the split screen mode and the normal screen mode.

操作切替

## **Operable screen** **56**

Press to switch the operable screen when the TV set is in the split screen mode.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.



# Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。



## ◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

# 1

Press  
 and  
select  
with

Select “設定” (Setup) on  
the Home menu.

ホームメニューから「設定」  
を選ぶ



# 2

Select  
with

Select “ (視聴準備)”  
(View Setting).

「 (視聴準備)」を選ぶ



# 3

Select  
with  
  
Press

Select “Language(言語)”.  
「Language(言語)」を選ぶ



# 4

Select  
with  
  
Press

Select “English”.  
「English」を選ぶ

Enter.  
決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

# 5

Press

Finish this operation.  
終了する

はじめに  
お読みください

テレビを見る／  
便利な使いかた

ファミリンク

ビデオ・オーディオ・  
パソコンをつなぐ

USBハードディスク  
をつないで録る・見る

インターネット／  
ホームネットワーク

設置・接続・  
受信設定

故障かな？／  
エラーメッセージ

お役立ち情報  
(仕様や案外)

English  
Guide